



Outdoor Ultrasonic Animal Repeller with Motion Activation

Order ref: 350.505UK


User Manual

Keep unwanted animals out of your garden, yard or rubbish bins with this compact repeller. Equipped with a PIR motion sensor, the unit is only activated when movement is detected nearby, emitting ultrasonic frequencies and triggering a red LED to humanely drive animals away from your property. The rugged, weatherproof housing can be either hung on a wall or fence via the keyhole slots on the rear, or mounted using the garden spike (provided) to achieve the optimum coverage. Effective against animals including dogs, cats, mice, rats, foxes and more.

Features:

- A safe and humane way to repel unwanted animals from your property
- 70 sq m coverage (110°@ 8m)
- Tough, weatherproof ABS housing
- Ground mounting spike included
- Requires 4 x AA batteries (not included)

Installation:

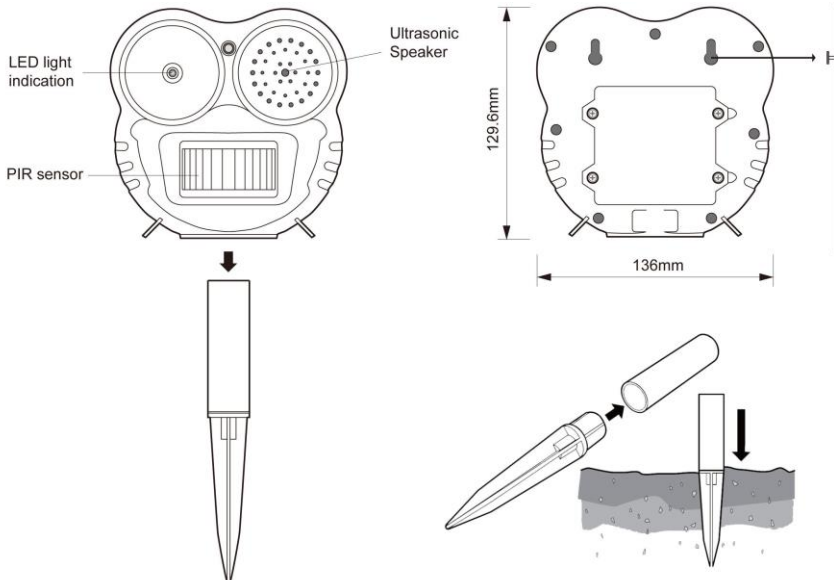

1. **Install the batteries** by loosening the 4 locking screws and removing the battery compartment door on the rear of the unit. Insert 4 x AA alkaline batteries (not supplied), observing the + and – polarity guides within the battery compartment. Replace and secure the compartment door by tightening the 4 locking screws.
2. **Wall mounting:** The unit can be mounted to a wall or fence using the keyhole slots on the rear panel. Use 2 round-headed screws of maximum 5mm head diameter, horizontally spaced 63mm apart, between 150mm and 360mm from the ground. Slot the unit onto the screws and push down to lock in place.
3. **Ground mounting:** Assemble the ground spike and push it into the ground to a depth of approximately 110mm. A rubber mallet may be used to tap the ground spike in if the ground is hard, but never tap the unit itself! Securely mount the unit to the ground spike using the recess on its base.
4. For best results, choose a location away from large objects that can move in the breeze and trigger the unit, such as tree branches, tall flowers or plants.

Caution:

- For reasons of electrical safety, this device must never be immersed in water, exposed to damp conditions or excessive force.
- Turn the unit off if pets are playing nearby.
- Never cover the PIR sensor.
- Never use chemicals to clean the unit. Use only a soft damp cloth with mild soap and water.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.
- Please retain this manual for future reference.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2018. AVSL Group Ltd.*